


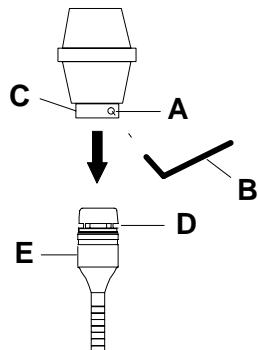

**MICROFLEX® METAL WINDSCREEN  
MODEL A412MWS**

**INSTALLATION**

1. Loosen set screw (A) with the supplied miniature hex wrench (B).
2. Slide metal windscreens over the microphone head until it **COMPLETELY** covers the cartridge. The windscreens stops when it is pushed on all the way.  
**NOTE:** Make sure that the windscreens collar (C) does not cover the microphone sound ports (D), but rather, encircles the microphone shaft (E).
3. Tighten the set screw (A) with the supplied miniature hex wrench.



*SHURE Incorporated Web Address: <http://www.shure.com>*

*222 Hartrey Avenue, Evanston, IL 60202-3696, U.S.A.*

*Phone: 847-866-2200 Fax: 847-866-2279*

*In Europe, Phone: 49-7131-72140 Fax: 49-7131-721414*

*In Asia, Phone: 852-2893-4290 Fax: 852-2893-4055*

*Elsewhere, Phone: 847-866-2200 Fax: 847-866-2585*

---

©2002, Shure Incorporated  
27B2938 (BC)

Printed in USA